

Advanta

Care & Maintenance Guide

Advanta chairs are manufactured to stringent standards and the only maintenance generally required is to keep them clean. Any specific care instructions for upholstery coverings attached to the chair must be followed.

All maintenance work should be carried out by authorised Advanta repair agents.

FABRIC CARE:

DO NOT REMOVE ANY PART FOR SEPARATE CLEANING

REGULAR CARE: Protect from direct sunlight. Rotate reversible cushions regularly. Vacuum regularly using low suction and soft brush accessory.

GENERAL CLEANING:

HOT WATER EXTRACTION MACHINE METHOD - PROFESSIONAL CLEANING STRONGLY RECOMMENDED: Use only proprietary brand upholstery detergent. Do not use dishwashing or laundry detergents. Do not wet filling. For pile fabrics, gently vacuum to restore pile. Dry in shade away from direct heat and sunlight. Allow to dry thoroughly before re-use.

OR

ON-SITE DRY CLEANING MACHINE METHOD PROFESSIONAL

CLEANING ONLY: Do not wet filling with solvent. Extract solvent thoroughly after application. Do not scrub with stiff brush. **CAUTION:** Exhaust solvent vapour outside building. Provide adequate ventilation during cleaning and drying. Allow to dry thoroughly before re-use. Avoid use of room during drying period.

OR

SHAMPOO METHOD: Use proprietary brand upholstery shampoo. Do not use dishwashing or laundry detergent. Do not wet filling. Do not scrub with stiff brush. For pile fabrics, gently vacuum to restore pile. Dry in shade and away from direct heat and sunlight. Allow to dry thoroughly before re-use.

SPOT CLEANING: Treat spills and stains as soon as possible. Gently scrape any soil or mop any liquid from the surface of the fabric. Do not scrub with a stiff brush. Apply proprietary cleaning agents strictly according to instructions. Test on inconspicuous area before use. Do not saturate the fabric or filling with water or other cleaning fluids. May be spot cleaned with dry cleaning solvent.

POLYPROPYLENE SHELL:

Advanta

For general care we recommend wiping down with warm soapy water and leave for a few minutes before wiping dry with a soft cloth. Use a soft bristle brush to remove heavier dirt.

Do not use abrasive cleaners or hard bristle brush as this may scratch the surface of the plastic.

STEEL FRAME:

For routine cleaning, we recommend wiping with warm water and soap or mild detergent, then rinse with clean water and wipe dry.

Do not use abrasive cleaners, steel wool or metallic scourers as this can damage the surface and cause it to rust.

TIMBER:

For general care we recommend dusting with a clean, dry cloth, or wiping down with soft cloth wrung dry from plain water (leaving the surface dry after cleaning).

Solvents like nail polish remover or metho can cause significant damage to your timber furniture. Do not use these products with timber as direct contact will require re-varnishing to repair.

PLEASE NOTE:

Hard tyred castors are unsuitable for use on hard floors or firm chairmats in which case soft tyred castors should be used. Soft tyred castors are distinguishable by the tyre generally being a different colour to the body of the castor.